
LAMP

AZ-GD180-HL STAINLESS STEEL SOFT CLOSING FLAP LID SYSTEM Installation instructions

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

- Damper allows silent closing of lid.
- Side plates for anti-pinch function.

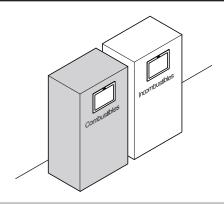

FOR YOUR SAFETY AND CORRECT INSTALLATION

Meaning of symbols







Required



Caution If not followed, injury or damage may result.

- 1 The AZ-GD180-HL is designed to function when installed vertically as shown below. Horizontal, slanted or upside down installation will result in improper function and may lead to injury.
- ① To prevent the risk of the product falling and causing injury, ensure that the AZ-GD180-HL is securely fastened to a structure with adequate strength.
- Do not disassemble nor modify any parts other than those described in this document.
- Recommended ambient temperature range is 0 to 40 degrees centigrade.
- The closing speed of the lid may vary according to ambient temperature .If the product is stored below zero degrees, please store in room temperature for several hours before use.

PARTS DESCRIPTION

Description	Quantity
Flap lid body	1
Warning sticker	1
Cover cap	4

TOOLS NEEDED FOR INSTALLATION

Screws (not provided)


Choose the suitable length according to the material to be mounted.

Recommended screw: 3mm tapping screw · · · · · 4 pcs

DIMENSION DRAWING


(148.5)when flap is at 90 4× ∮3.5 holes (23.5)for installation when flap is at 90⁹ 218 screws 182 90° is at flap 128 148 when 182) 100

CUTOUT DIMENSIONS

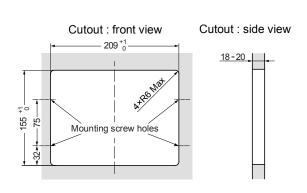




Make sure that the LAMP logo is at the top.

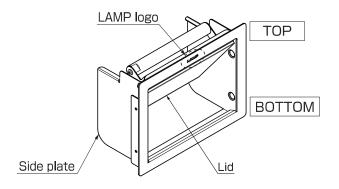


Do not leave any gap between the flap lid body and the mounting surface.

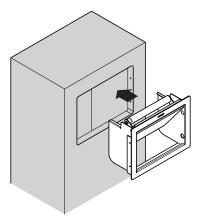

3


- [1] Having opened the lid, insert the screws through the provided access screw holes (two on each side) and fasten the flap lid body securely.
- [2] Make sure that the final assembly is securely fastened.

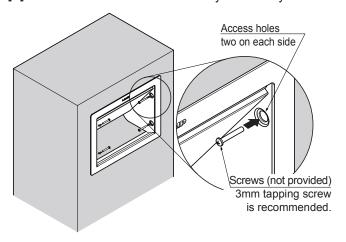

Slowly open and close the lid completely a few times in order to ensure correct operation.

5

Cover the access holes with the cover caps provided.

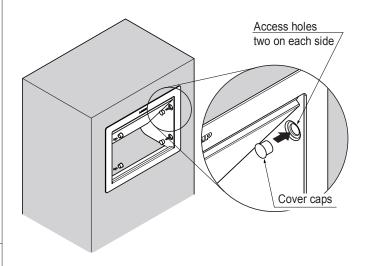

6

Paste the warning sticker in a visible position to avoid any injury when operating the lid.



E-mail:lamp@sugatsune.com.cn Guangzhou, CHINA

Phone: +86 20 6639 3552 E-mail:lamp@sugatsune.com.cn SUGATSUNE AMERICA, INC California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Illinois, USA

Phone: +1 630 317 7072 E-mail:sales@sugatsune.com

SUGATSUNE CANADA, INC.

SUGATSUNE EUROPE GmbH
Düsseldorf, GERMANY
Phone: +49 211 53812900 E-mail:sales@sugatsune.eu ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca